


## INSTALLATION SHEET

SHEET NO. 492 853

ISSUE 1

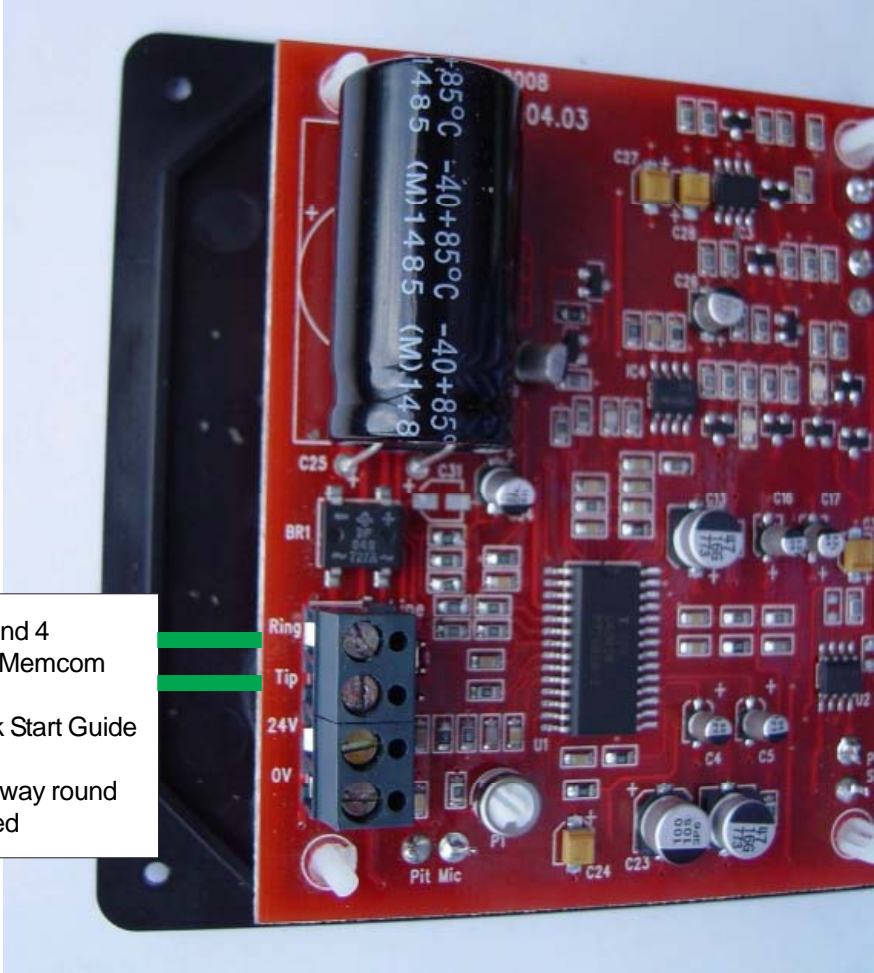


Connect to terminals 3 and 4  
marked Intercom on the Memcom

Please refer to the Quick Start Guide

It does not matter which way round  
these wires are connected

Fig 1: Memcom Connection

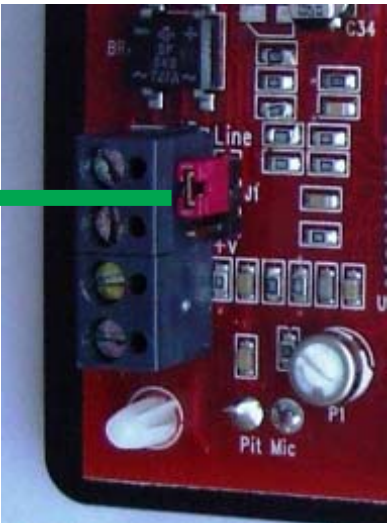

The jumper is set to LINE (as shown) when powered by  
the Intercom connections from the Memcom.

If using more than three MPS units (pit phones) then  
additional units must be powered externally from +12  
to +24VDC. This power supply should be smoothed.

To use an external power source move the jumper  
to the +24V position.

Fig 2: Jumper Link Setting